

Specifications

Power Supply	24 VAC/VDC External Power (22-26 VAC/VDC), <2 VA <i>(Note: Output and power supply negatives are not isolated).</i>
Input Range: Input Impedance	15, 25, 50, 60 VAC/VDC: >220 K Ω 120 VAC/VDC: >410 K Ω 150, 240, 300, 400, 500, 600 VAC/ VDC: 620 K Ω
Frequency Range	0 - 5 KHz
Output Signal	4-20 mA (capped at 31 mA max) 0-5 VDC (capped at 7.75 VDC) 0-10 VDC (capped at 11.5 VDC)
Response Time	500 ms (to 90% of step change)
Accuracy	< 1% Full Scale
Output Loading	4-20 mA: < 400 Ω 0-5/10 V: >50 K Ω
Isolation Voltage	2200 VAC
Enclosure	UL94 V-0 Rated
Environmental	Operating Temperature -4 to 122°F (-20 to 50°C) (surrounding air) 0-95% RH, Non-condensing Pollution Degree 2 Altitude to 6561 ft (2000 meters)
Listings	UL/cUL, CE

For products intended for the EU market, the following is applicable to the CE compliance of the product:

The VTU series comply with EN 61010-1 CAT III 600 V max measurement category. Use 24 V input power and fuse at 5 amps. Power source overvoltage category I as defined per EN 61010-1

Warning! Risk of danger



Safe operation can only be guaranteed if the transducer is used for the purpose for which it was designed and within the limits of the technical specifications. When this symbol is used, it means you must consult all documentation to understand the nature of potential hazards and the action required to avoid them.

Warning! Risk of electrical shock



When operating the transducer certain parts may carry hazardous live voltage (e.g. primary conductors, power supply). The transducer should not be put into operation if the installation is not complete.

Model Number Key

VTU A - 420 - 24U - DIN

CASE STYLE:

DIN - DIN rail compatible

POWER SUPPLY:

24U - Nominal 24 VAC/VDC

OUTPUT:

420 - 4-20 mA

005 - 0-5 VDC

010 - 0-10 VDC

MONITORED VOLTAGE RANGE:

A - 15 VAC/VDC

B - 25 VAC/VDC

C - 50 VAC/VDC

D - 60 VAC/VDC

E - 120 VAC/VDC

F - 150 VAC/VDC

G - 240 VAC/VDC

H - 300 VAC/VDC

I - 400 VAC/VDC

J - 500 VAC/VDC

K - 600 VAC/VDC

SENSOR TYPE:

VTU - AC/DC Voltage Transducers

Know Your Power



Other NK Technologies Products Include:

AC & DC Current Transducers

AC & DC Current Operated Switches

1 ϕ & 3 ϕ Power Transducers

Current & Potential Transformers (CTs & PTs)



NK Technologies

3511 Charter Park Drive, San Jose, CA 95136

Phone: 800-959-4014 or 408-871-7510

Fax: 408-871-7515

sales@nktechnologies.com, www.nktechnologies.com



NK Technologies

INSTRUCTIONS



VTU SERIES

AC/DC Voltage Transducers
Ranges 15, 25, 50, 60, 120, 150,
240, 300, 400, 500 and 600 Volts
4-20 mA, 0-5/10 VDC Outputs

Quick "How To" Guide

1. Ensure correct sensor model was chosen for Monitored Voltage of application.
2. Mount the sensor to a DIN rail using integrated mounting clip on backside of transducer.
3. Connect monitored voltage (5) & (6) and output wiring using 30-12 AWG copper conductors only rated 75°C minimum, 5-7 in-lbs torque. Connect output and power wiring using 22 AWG up to 12 AWG copper wires rated 75°C minimum, 6 in-lbs torque. Refer to Specifications section for voltage and impedance recommendations.
4. Connect 24 VAC/VDC power supply fused to 5 amps to terminals 3 and 4.

Do not connect power and output signal together.


Description

VTU Series Voltage Transducers are designed to monitor AC or DC voltage and detect conditions where supply voltage is above or below normal. Detecting such conditions helps users to avoid problems commonly associated with voltage irregularities such as motor overheating, brownouts and conductor failure or poor connections. The VTU is available with 4-20 mA, 0-5 or 0-10 VDC output options.

Installation

VTU transducers feature a 35 mm wide DIN rail compatible enclosure and are typically located in the same environment as motors, contactors, heaters, pull-boxes, and other electrical enclosures.

To mount on DIN rail: Orient transducer so that line voltage terminals 5 and 6 are upright/on top of unit and snap securely onto DIN rail. To remove, insert small screwdriver into the lower mounting hole of the spring loaded clip, and push the handle end of the screwdriver toward the sensor base to release the tension on the rail.

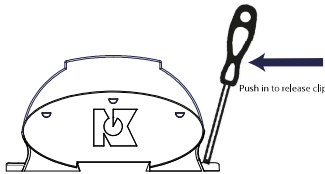

To mount using screws: Insert screws and mount to back plane or other suitably flat surface.

Monitored Voltage Wiring Connection

CAUTION: TO AVOID ANY POTENTIAL FOR SHOCK OR SAFETY HAZARD, ENSURE LINE VOLTAGE IS DISCONNECTED AT SOURCE BEFORE WIRING TO UNIT.


Connect input voltage to be monitored to terminals (5) and (6) on transducer using up to 30-12 AWG copper wires and tighten terminals to 5-7 in-lbs torque.

Do not connect the power supply and output signal together. There is no isolation between power and output signal.

Use twisted pair for power supply conductors for full compliance with CE directives.

Output Wiring

Connect control or monitoring wires to the sensor terminals 1 and 2. Use up to 22-12 AWG copper wire insulated to 75°C minimum and tighten terminals to 6 in-lbs torque. Observe polarity, terminal 1 is the positive output, 2 is negative.

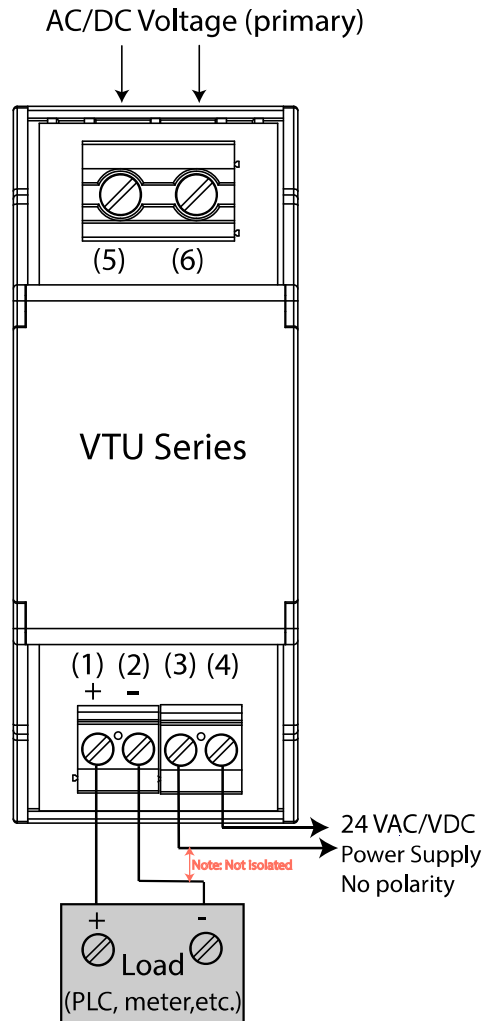

Troubleshooting Tips


- 1. Transducer has no output**
 - A. Power supply is not properly sized. *Check power supply voltage and output rating. Each transducer requires less than 2 VA to operate.*
 - B. Output polarity is not properly matched. *Check and correct wiring polarity.*
- 2. Output signal too low or too high**

Transducer model improperly sized for application. *Determine the normal operating voltage of your monitored circuit and ensure transducer selected is equal to or slightly higher than the normal operating voltage.*
- 3. Transducer output is always at 4 mA (or zero voltage)**

Primary circuit is not on. *Check that the monitored circuit is actually energized.*
- 4. Transducer output is always at 20 mA (or 5/10 VDC)**

Voltage is higher than transducer range. *Select a higher*

Transducer Output vs. Input Voltage

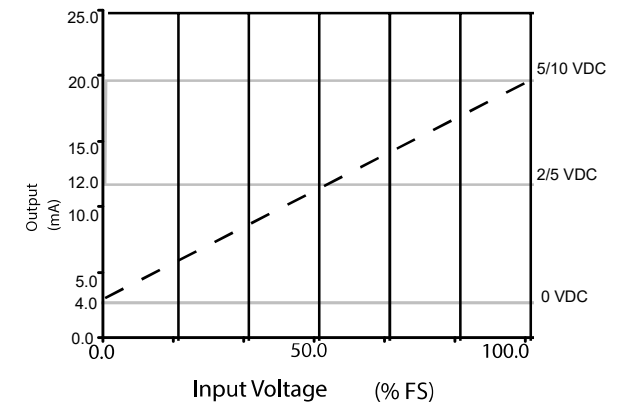

Note: Voltage output will be linear in the same manner, with zero at zero primary voltage and 5 or 10 VDC at the full range measured voltage.